 



**WS-55857, WS-55907, WS-65857, WS-65907, and WS-73907**

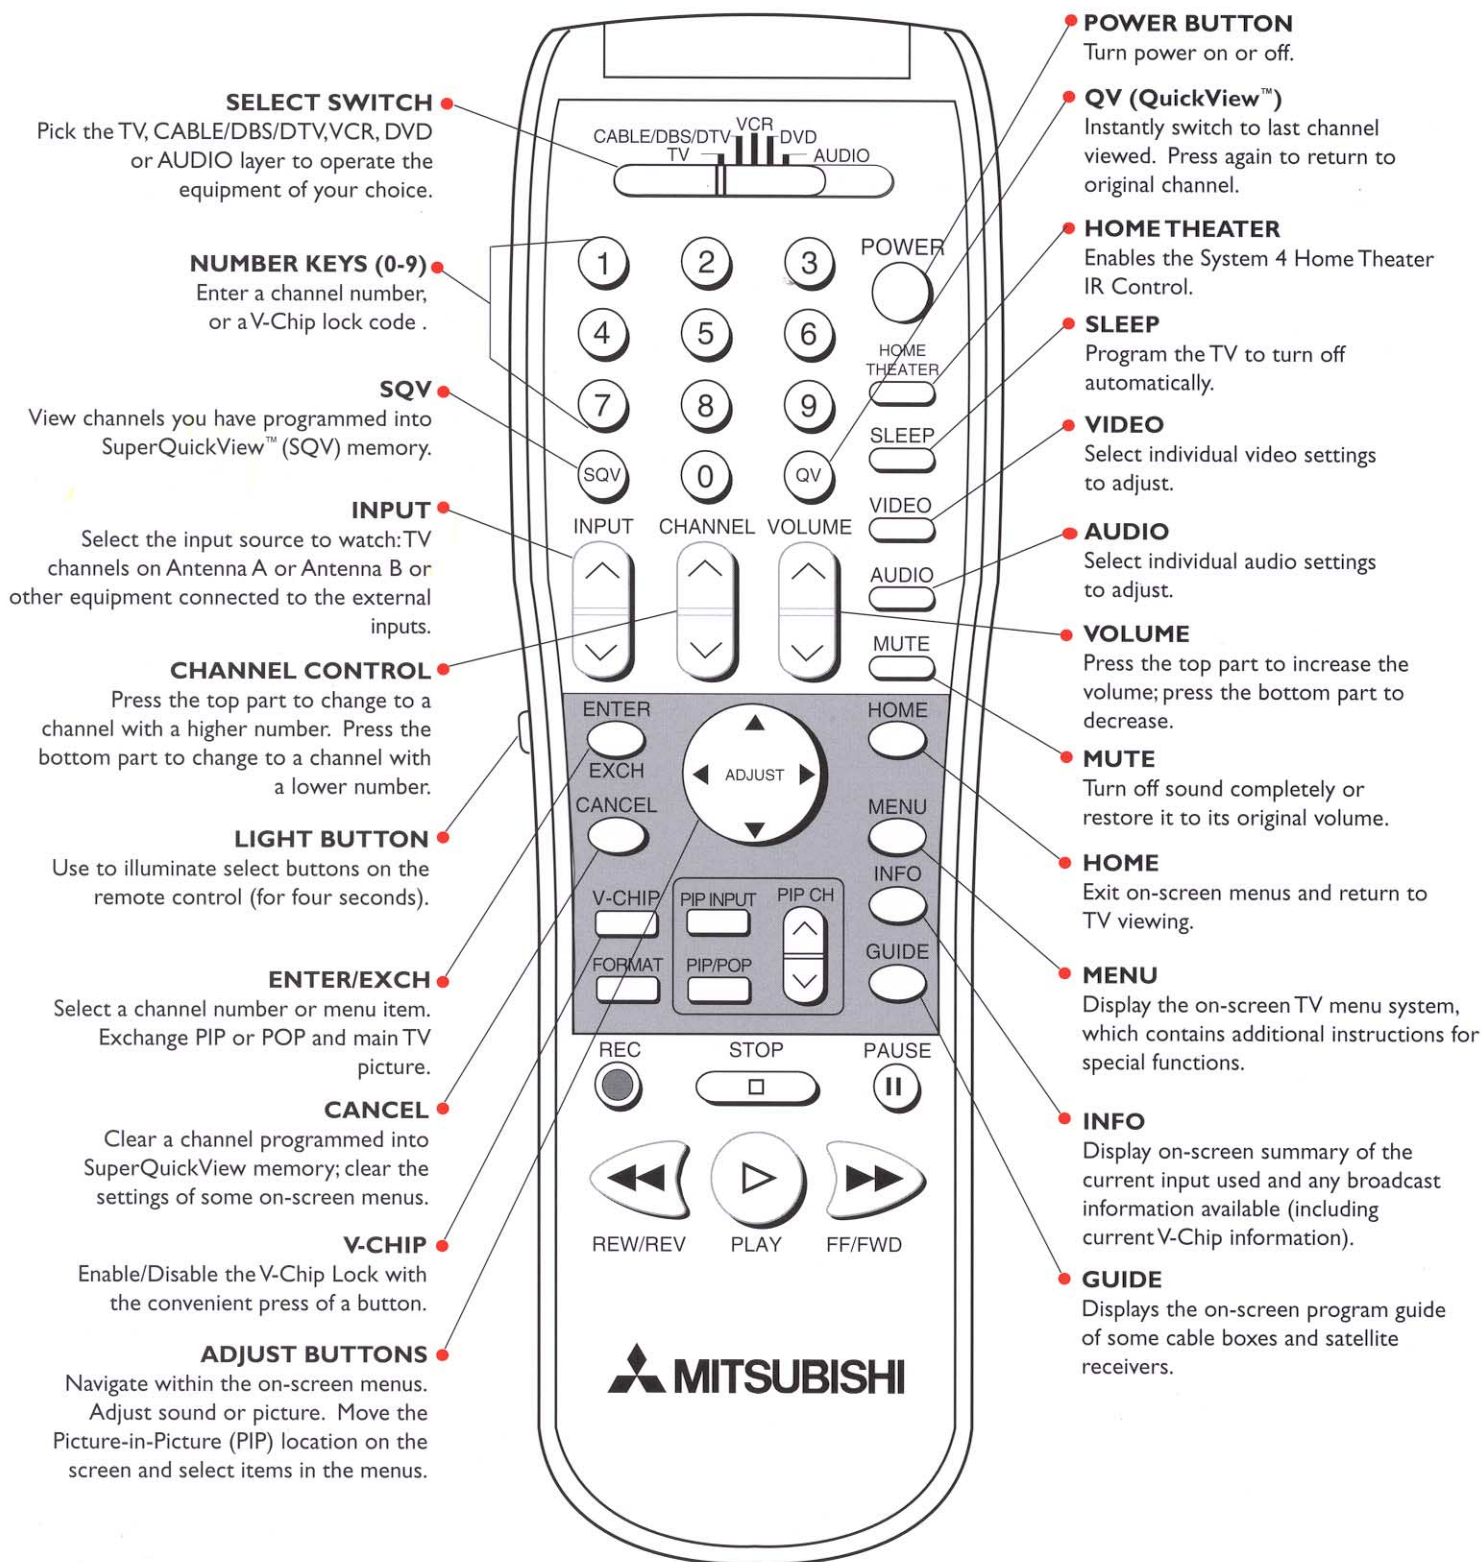

Detailed explanations on using remote control buttons with particular features, and programming the remote to operate other equipment are in your Mitsubishi TV Owner's Guide.

### PIP (PICTURE-IN-PICTURE) and POP (PICTURE-OUTSIDE-PICTURE) CONTROLS

 - **ADJUST** - After displaying PIP, press to change the image position.
- **EXCH** - Exchange the PIP and main images.
- **PIP INPUT** - Press repeatedly to switch the source of the PIP or POP image between the TV and external inputs.
- **FORMAT** - Change the shape and size of the main TV picture.
- **PIP/POP** - Display or cancel the PIP image. Display, change, or cancel POP.
- **PIP CH** (PIP channel key) - Change the channel of the PIP image.

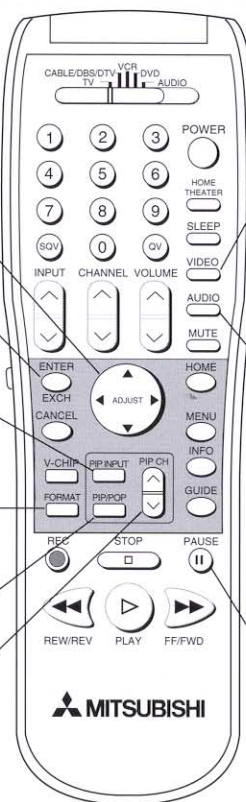

### AUDIO/VIDEO CONTROLS

#### VIDEO

- Use the video key to select:
- IRIS™
  - Contrast
  - Brightness
  - Sharpness
  - Color
  - Tint
  - Color temperature (low/6500K/medium/high)
  - Video Noise
  - Image Type

 
 
 
#### AUDIO

- Use the audio key to select:
- Bass
  - Treble
  - Balance
  - Surround (simulate/surround/off)
  - Listen to (stereo/SAP/mono)
  - Level sound (on/off)

- **PAUSE** - Freeze the PIP/POP image or return to a "live" image.

### PIP (Picture-Inside-Picture) POP (Picture-Outside-Picture)


Pressing the PIP/POP button will cycle through the following displays:

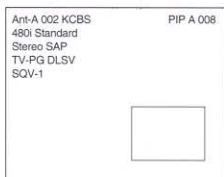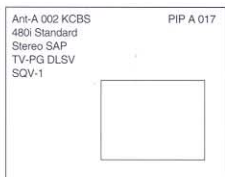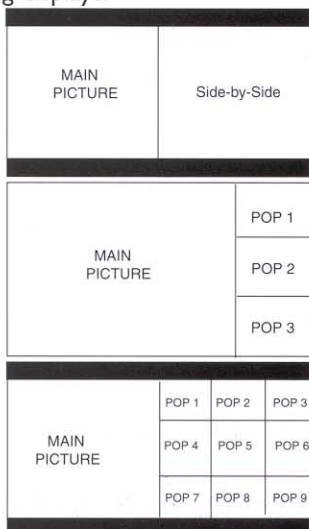

### HOW TO VIEW YOUR VCR OR OTHER EQUIPMENT

To view the signals from your VCR or other equipment you have connected, select the correct input source. Press the INPUT key on the remote control or the front panel. You can choose from the following input sources:

 
- **ANT-A or ANT-B** -- (antennas or cable systems connected to the two antenna terminals)
- **DTV** -- (Equipment connected to the DTV input on the back of your TV)
- **Input 1/Input 2/Input 3** -- (equipment connected to the terminals on the back of your TV)
- **Input 4** -- (equipment connected to the terminals on the front panel of your TV)
- **Component-1/Component-2** -- (equipment connected to the component inputs on the back of your TV)
- **VGA** -- Computer connection
- **STB** -- Connection for device with S-Video output

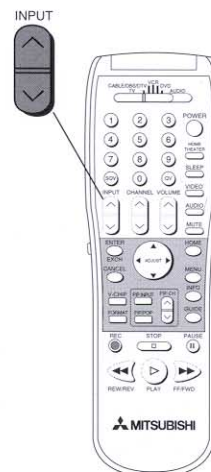


### NOTES:

- Channels from Antenna B are not available as the PIP image when main source is ANT-A.
 
## MITSUBISHI VCR

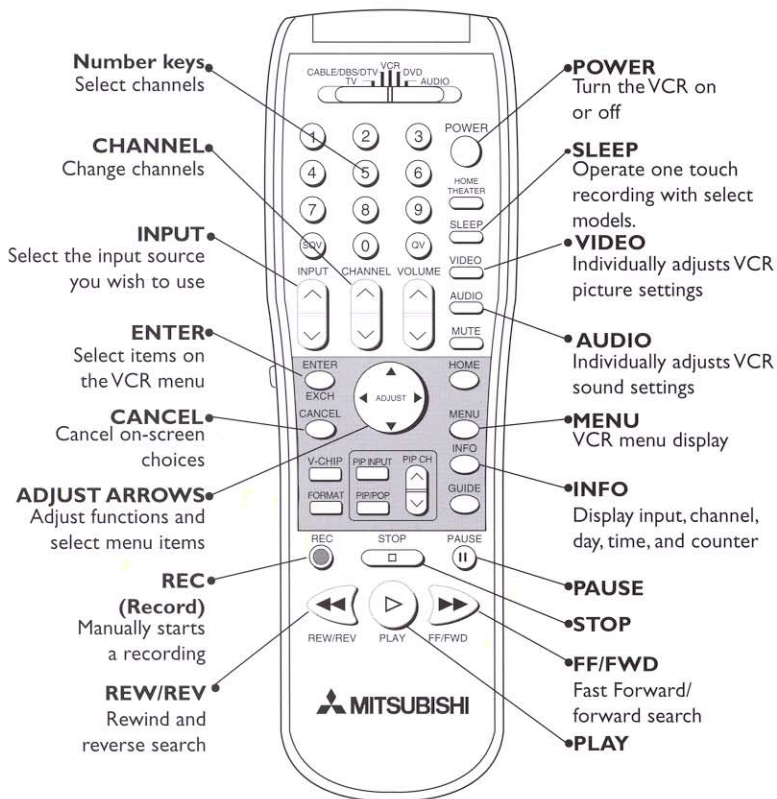


## MITSUBISHI DVD

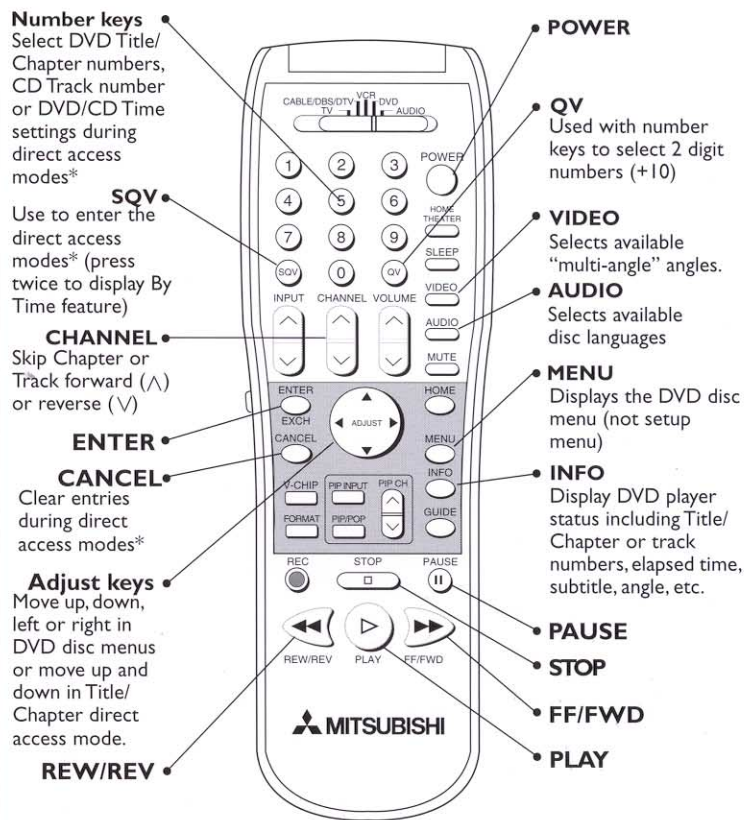 

\* direct access modes: Title/Chapter, Track or By Time


## MITSUBISHI SATELLITE (SR-SD50, SR-SD100, SR-HD400, or SR-HD500)

 setup code 006

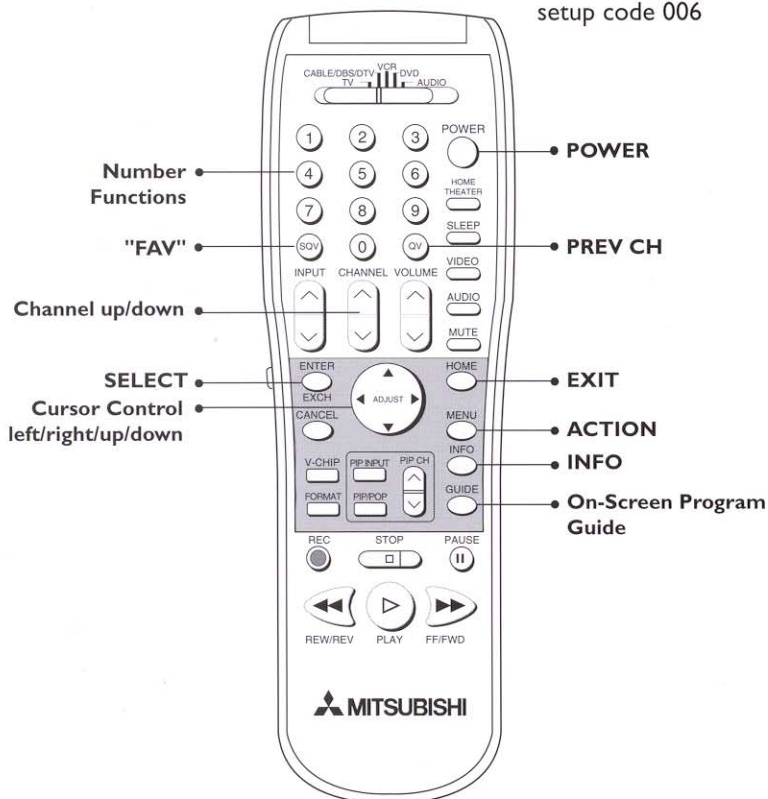

## MITSUBISHI AUDIO\* (Dolby® Digital Surround Sound Receivers)

 setup code 010

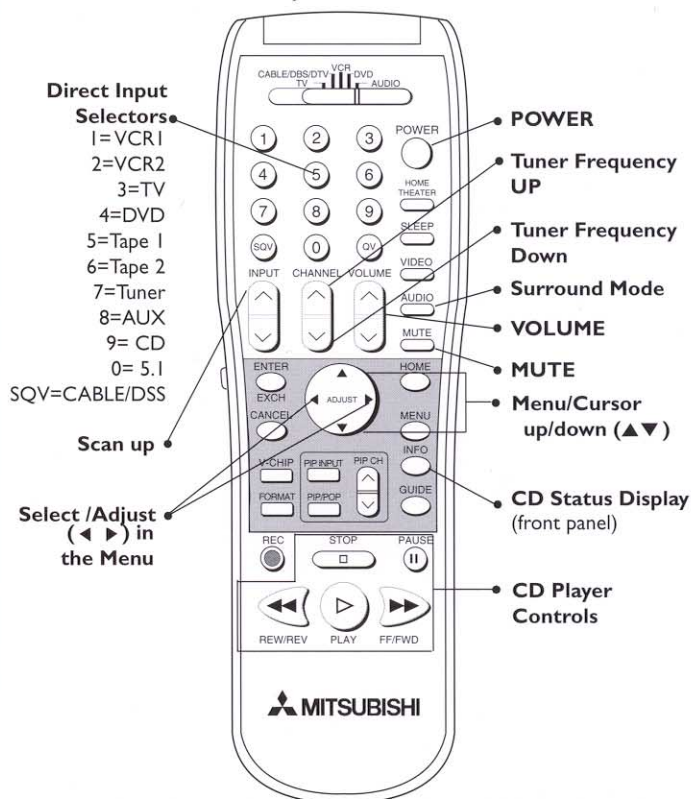

\*Not all receivers respond to all listed functions

With Mitsubishi's exclusive **ViewPoint®** on-screen operating system, choices and changes can be made quickly, using your remote control and the on-screen menus.

A highlighted **icon** is shown when there is another menu level for your choices. Pressing the **ENTER** button will display the menu options.

A highlighted **button** is shown when there is a sub-menu or automatic function. Pressing the **ENTER** button will display the sub-menu or start the automatic function.

Use the **ADJUST** control to navigate up/down/left/right.

Press **CANCEL** to clear a setting or stop an automatic function.

Relevant instructions will appear in this text bar.



Press the **MENU** button to move back one menu screen at a time until you exit all the menus to return to television viewing

**OR**

Press **HOME** to exit all menus with one keystroke and return to television viewing.

If you have other questions regarding your television, call Consumer Relations at 800-332-2119, or email us at [MDEAservice@bigscreen.mea.com](mailto:MDEAservice@bigscreen.mea.com)

To order replacement or additional remote controls or owner's guides call 800-553-7278

or

visit our website at [www.mitsubishi-tv.com](http://www.mitsubishi-tv.com)